


List of alarms of New NETYS RT 1-3KVA Rack/tower

Error Code	Fault description
E11	Charger fault
E12	Fan fault
E13	Transformer and Heat Sink OTP Shutdown (Transformer and Heat Sink OTP)
E14	±DC BUS High/Low
E16	Inverter fault
E18	DC-DC fault
E19	Output/Inverter Voltage Abnormal
E21	O/P short
Sd0	EPO shutdown
Sd1	RPO shutdown
Sd2	“Shutdown After” shutdown
Sd3	“Battery Save” shutdown
Sd4	“Battery Low” shutdown
Sd5	Empty battery cold start shutdown

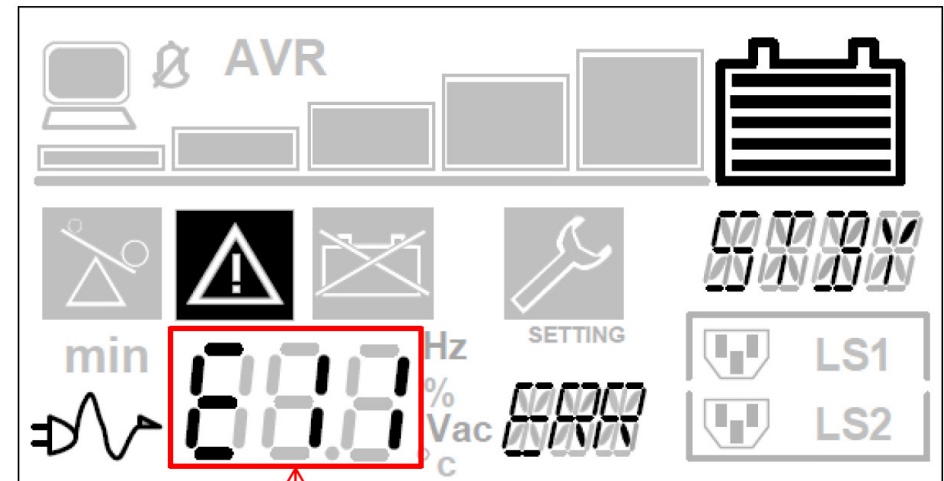

Error Code